



hs sports 

Camera head and clamp together.



Unscrew clamp from camera head. View above shows head and clamp disassembled



Close-up of clamp. Close-up of camera head.



Close-up of the top of the tripod.

The spigot sticking out of the casting is fixed in position by the screw clamp shown.

In this picture it's set too high. Only the thread should stick up.

The camera head which has been unscrewed from the clamp screws onto this spigot.